

NEC SV8100 (door stations) - Quick User Guide

MAKING CALLS:

To make a call to a door station:

- Lift handset or press **Speaker** key (if available).
- Dial 702 followed by door number (1 or 2) or press Direct Door Station Key (if available).
- Converse with door
- To open door press **recall** key (may also be called **flash, hookflash** or **R**).

ANSWERING CALLS:

To answer a door station call:

- If ringing at your handset – Lift handset or press **Speaker** key.
- If not ringing at your handset – Lift handset and dial “*#”.
- To open door press **recall** key (may also be called **flash, hookflash** or **R**).